

Krovatar

Blu-ray Disc™ Player

ブルーレイディスクプレーヤー


Model: KB-200/KB-200D

使用说明书

Instruction Manual

PANEL DESCRIPTION

- 1. ▲ OPEN/CLOSE
- 2. ▶⏸ Play/Pause
- 3. ⏻ Power ON/OFF
- 4. 🖱 USB 2.0 Interface
- 5. Remote Receiver
- 6. DC 12V/1A
- 7. HDMI Interface
- 8. Coaxial Interface
- 9. Audio L/R
- 10. LAN
- 11. Video Output

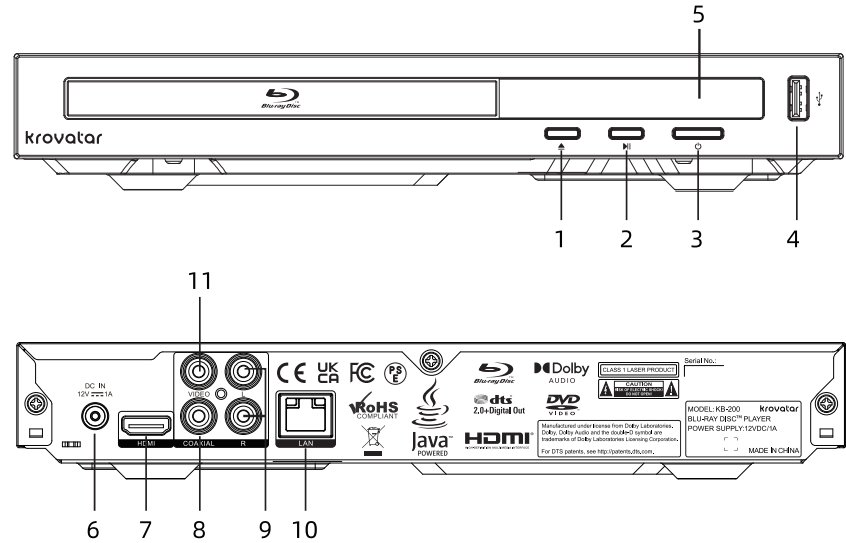

List of items included (please check if all the following items are included)

- | | |
|-----------------------|------------------|
| ● KB-200/KB-200D Unit | ● HDMI Cable |
| ● AC 12VDC/1A Adapter | ● AV Cable |
| ● Instruction Manual | ● Remote Control |


MODEL DESCRIPTION

KB-200: 2K Blu-ray Disc™ Player

KB-200D: 3D Blu-ray Disc™ Player

REMOTE CONTROL


- (1) **POWER:** Switches between Standby and ON.
- (2) **OPEN/CLOSE:** Opens/closes the disc tray.
- (3) **GOTO:** Jumps to a user-specified time during playback.
- (4) **REPEAT:** Repeats playback.
- (5) **PRGM/ RED BUTTON:** Edits and plays the program.
- (6) **MARK/GREEN BUTTON:** To set a bookmark for the currently playing disc.
Short press to add a bookmark.Long press to pop up the bookmark list.
- (7) **A-B/YELLOW BUTTON:** Press once to set the start point during playback, press again to set the end point, and repeatedly play the selected section.
- (8) **ZOOM/BLUE BUTTON:** Zooms in or out.
- (9) **MUTE:** Mutes or unmutes the sound.
- (10) **TOP MENU:** Displays the menu of Blu-ray discs or the title menu of discs.
- (11) **TITLE POPUP:** Displays the popup menu of Blu-ray discs or the DVD menu.
- (12)(13)(14)(15) **Up, Down, Left, Right:** Moves the highlight within the menu;
OK: Confirms an entry or selection.
- (16) **OSC:** Opens the on-screen control menu.
- (17) **HOMEPAGE:** Returns to the main interface.
- (18) **RETURN:** Returns to the previous display menu.
- (19) **VOL+:** Increases the volume.
- (20) **VOL-:** Decreases the volume.
- (21) **INFORMATION:** Displays or hides on-screen information.
- (22) **PLAY/PAUSE:** Starts or pauses playback.
- (23) **STOP:** Stops playback.
- (24) **PREV:** Skips to the previous track or chapter.
- (25) **FAST-REVERSE:** Rewinds playback.
Press repeatedly to cycle through 5 speed levels.
(X1->X2->X3->X4->X5 ->PLAY)
- (26) **NEXT:** Skips to the next track or chapter.
- (27) **FAST-FORWARD:** Fast-forwards playback.
Press repeatedly to cycle through 5 speed levels. (X1->X2->X3->X4->X5 ->PLAY)

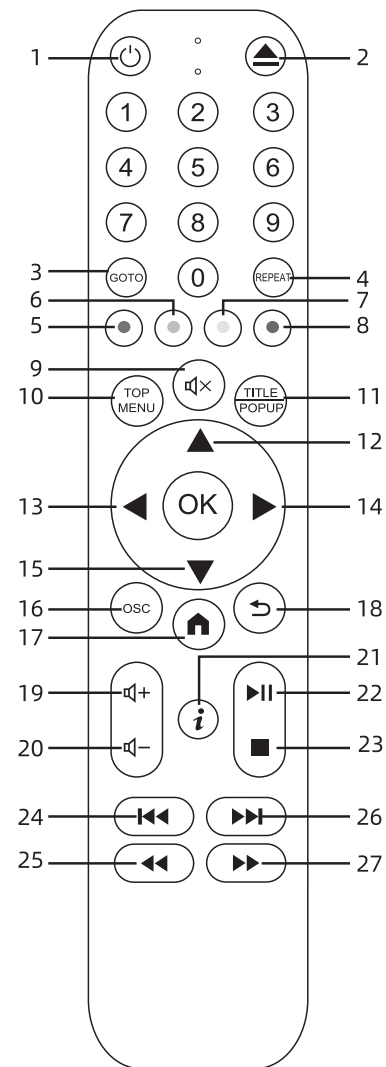

CONNECTIONS


1. Connecting to an External Power Source

Use the supplied AC 12VDC/1A adapter to connect to an external power source.

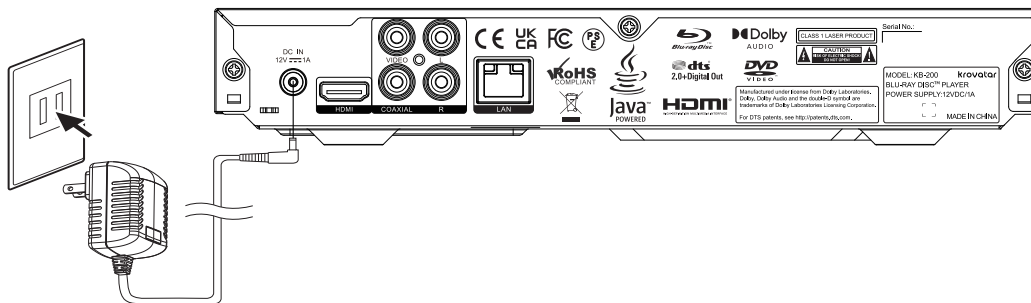

2. Connecting to TV and Other Devices via HDMI Cable

Connect one end of the HDMI cable to the HDMI port on this product, and the other end to the HDMI IN port on your TV.

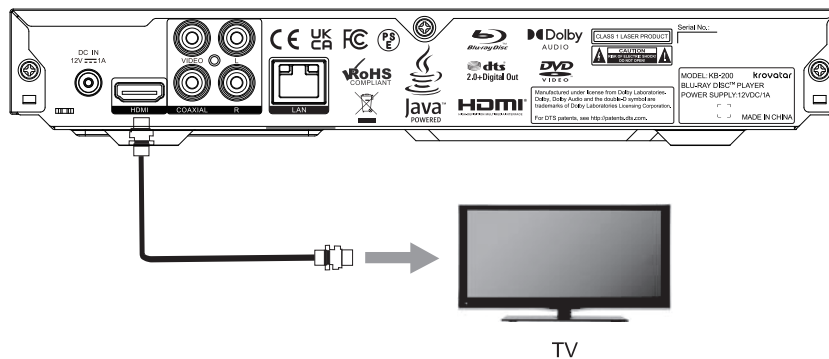

3. USB Connection


Connect a USB flash drive or external hard drive to the USB port on this product for software updates, BD Live content, and media playback.

Note:

- When playing a disc, do not insert a USB device or hard drive, as this may cause system instability or playback interruption.
- To play content from a USB device or hard drive, remove the disc first, then connect the USB or hard drive to begin playback.


4. COAXIAL Connection

Connect a coaxial cable (not included) from the COAXIAL OUT port on this product to the coaxial or digital input on your external audio device.

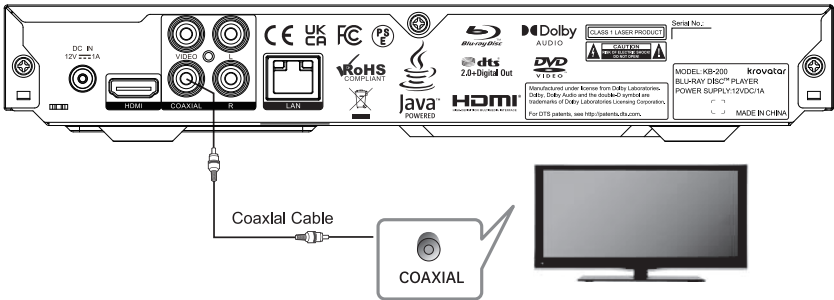


5. RCA Connection

Connect to the RCA input terminal of the TV with the included AV cable as shown.

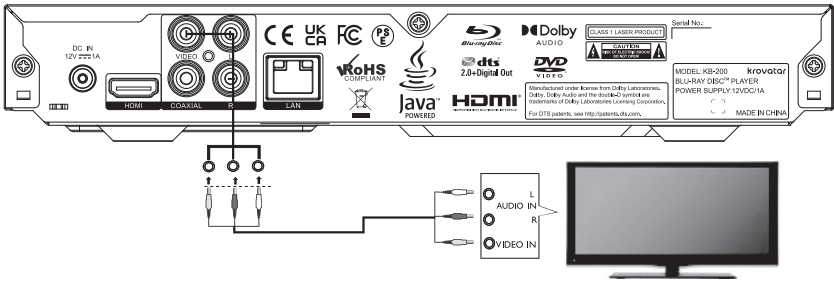


6. Connecting to the Network

Connect this product to the Internet to access BD-Live, DLNA and receive online bonus content.

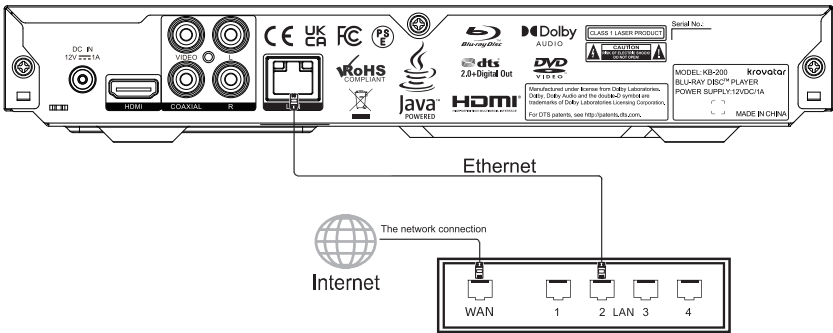


INTERFACE OPERATION (BD MODE)

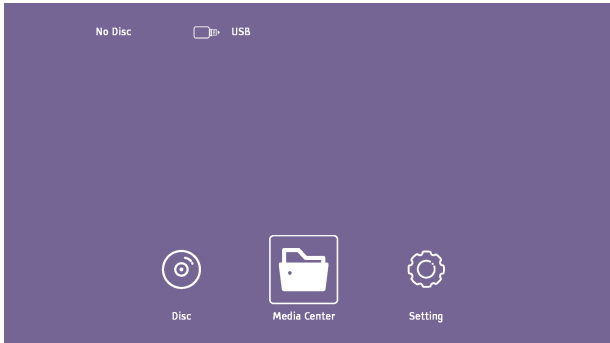

Disc: For all disc playback.


Media Center: For USB or HDD playback.

Setting: All setup menu.

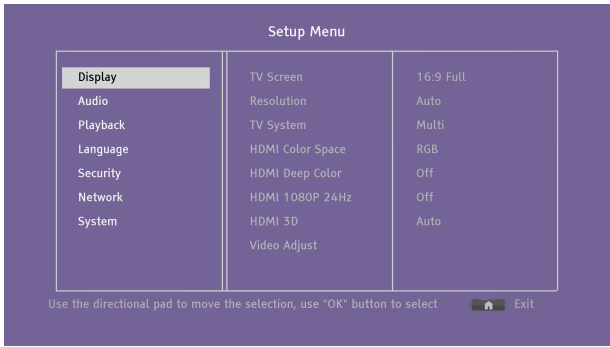


1. Display

- 1) **TV screen:** Selects the display mode for the TV.
- 2) **Resolution:** Selects the resolution for the TV.
- 3) **TV System:** Selects the TV system type.
- 4) **HDMI Color Space:** Selects the color space.
- 5) **HDMI Deep Color:** Selects the color for HDMI.
- 6) **HDMI 1080P 24Hz:** Enable/disable this setting.
- 7) **HDMI 3D:** Turn On/Off the 3D feature (Menu for KB-200D only).
- 8) **Video Adjust:** Use the directional buttons to adjust the brightness, contrast, hue, and saturation of the output image.

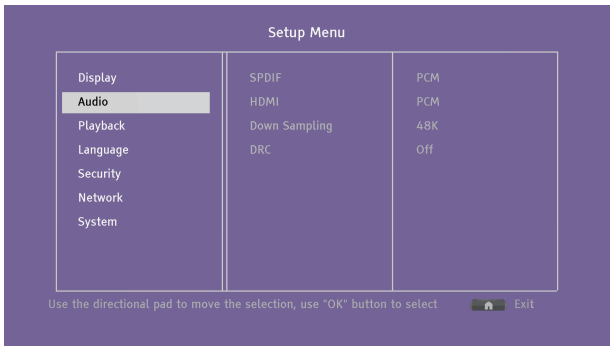


2. Audio

- 1) **SPDIF:** Set audio format output by SPDIF. Among the options, the maximum supported sampling rate depends on the selected audio format.
PCM is audio decoding processed by the Blu-ray player.
Bitstream means audio decoding handled by external devices.
- 2) **HDMI:** Set audio format of HDMI outputs.
- 3) **Down sampling:** Activate/deactivate down sampling. (Select this if your amplifier does not support 96kHz).
- 4) **DRC:** Set DRC on/off or auto.

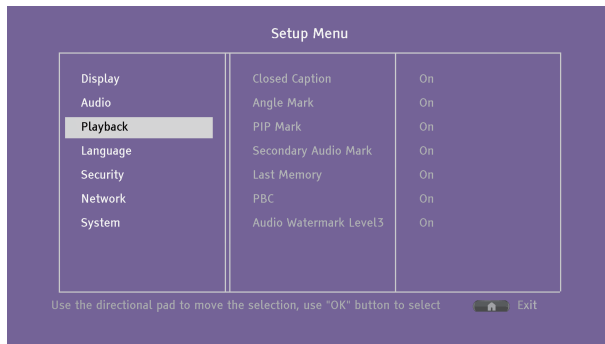


3. Playback

- 1) **Closed Caption:** Turn on/off CC (Close Caption) display.
- 2) **Angle Mark:** Turn on/off the Angle mark function.
- 3) **PIP Mark:** Turn on/off the PIP mark function.
- 4) **Secondary Audio Mark:** Turn on/off the Secondary Audio mark function.
- 5) **Last Memory:** Turn on/off the last memory function.
- 6) **PBC:** Turn the PBC function on/off.
- 7) **Audio Watermark Level3:** On/Off.

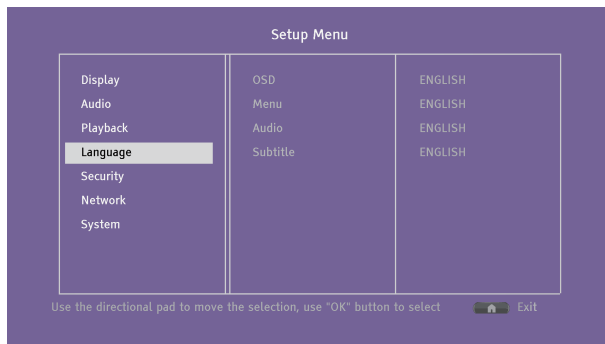


4. Language

- 1) **OSD:** Selects the OSD language.
- 2) **Menu:** Selects the menu language of the disc.
- 3) **Audio:** Selects the audio language for the program.
- 4) **Subtitle:** Selects the subtitle language for the program.

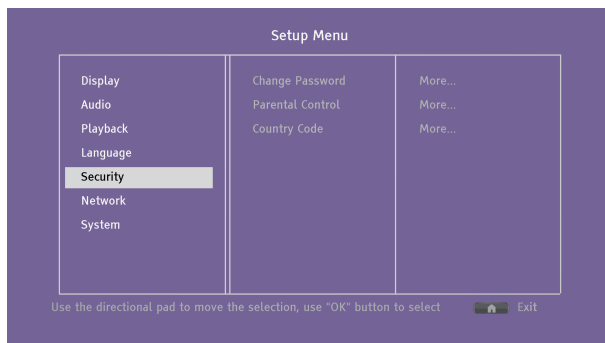


5. Security

- 1) **Change Password:** Changes the password for parental control menu (The default password is "0000").
- 2) **Parental Control:** To set the parental control.
- 3) **Country Code:** Set the country code.

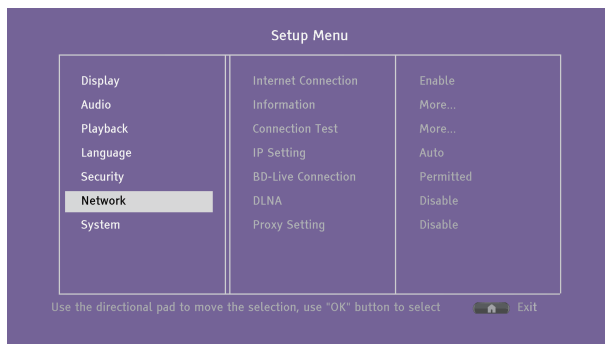

6. Network

- 1) **Internet Connection:** Choose whether to enable the Internet.
- 2) **Information:** Displays network information details.
- 3) **Connection Test:** Test if the player is connected to the Internet and display the test results.
- 4) **IP Setting:** Configure IP address settings (DHCP / Static IP).
- 5) **BD-Live Connection:** Choose the BD-Live content to be accessed.
- 6) **DLNA:** Enable/Disable DLNA.
- 7) **Proxy Setting:** Enable/Disable Proxy Setting.

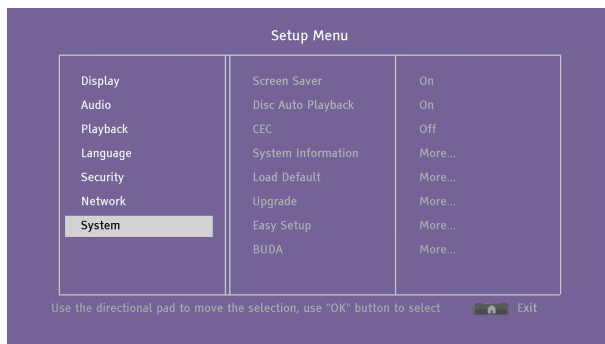

7. System

- 1) **Screen Saver:** Turns the screen saver on/off. The screen saver will be displayed after 3 minutes if there is no operation when the unit is turned on.
- 2) **Disc Auto Playback:** Turns the disc auto playback function on/off.
- 3) **CEC:** Enable or disable HDMI CEC.
- 4) **System Information:** Displays firmware version information.
- 5) **Load Default:** Return the player to its default settings.
- 6) **Upgrade:** Update the system via disc, USB storage device.
- 7) **Easy Setup:** Return to easy setup menu.
- 8) **BUDA:** Define memory for BD-J.
- 9) **Copy Right**

TROUBLESHOOTING

WARNING: Before requesting after-sales service, please check these possible solutions.

Risk of electric shock. Never remove the casing of the product. To keep the warranty valid, never try to repair the product yourself.

No reaction to the remote control	• Make sure the player is connected to a power outlet. • Insert the batteries correctly. • Please align the player in front of the infrared receiver window, the angle deviation should not be more than 30 degrees, the distance should exceed 5 meters. • If the remote still does not function, try putting new batteries into the remote control.
No picture	• See TV manual for correct video input selection Change the video input until you see the screen.
No picture on HDMI connection	• If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed. • Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable.
High-definition video signal not playing on the TV	• Ensure that the audio cables are connected to the audio input of the TV. • Set the audio input of the TV to the corresponding video input. See the TV user manual for details.
No sound on HDMI connection	• You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI compatible .
Disc cannot be played	• Ensure that the disc is loaded properly. • Ensure that this player supports the disc. See Specifications . • Ensure that this player supports the region code of the DVD or BD. • For DVD+RW, ensure that the disc is finalized. • Clean the disc.
Data Files cannot be played or read	• Ensure that the data file was recorded in the standard UDF, ISO9660 or JOLIET format. • Ensure that the JPEG file has the extension.jpg, JPG, jpeg or JPEG.
Not entry sign appears on the TV	• The requested operation is not possible.

To make a warranty claim, please email support@krovatar.com.

Specification

Model	KB-200/KB-200D
Chipset / Solution	MTK + Panasonic Loader
Interfaces / Ports	HDMI, USB, LAN, COAXIAL, AUDIO L/R, VIDEO
Supported Disc Formats	BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
Supported Video Formats	H.264, MPEG-1, MPEG-2, MPEG-4, WMV, AVCHD
Supported Audio Formats	Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS, WMA
Supported Image Formats	JPEG, PNG, GIF
Power Consumption	About 13W
Operating Temperature	5°C~35°C
Power Supply	DC 12V/1A
Dimensions	260*199*44.5mm
Weight	About 0.854kg
Included Accessories	AC Adapter , HDMI Cable, AV Cable, Instruction Manual, Remote Control

Safety and Maintenance

Here are some basic safety precautions that you should carefully follow when you use your new multi-media player. Read all instructions carefully! We are not responsible for damage or injuries caused by improper use of the appliance.

-  This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.
-  This symbol indicates important instructions accompanying the product.

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The appliance shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the appliance.



Read all of the instruction before using this Blu-ray player and keep this manual in a safe place for future reference.

1. Read and keep these instructions.
2. Heed all warnings and follow all instructions.
3. Do not use this player near water.
4. Clean only with a dry cloth.
5. Do not block any ventilation openings and install in accordance with the manufacturer’s instructions.
6. Do not install near any heat sources such as radiators, heat registers, or the player (including amplifiers) that produce heat.
7. Unplug this player during lightning storms or when unused for long periods of time.
8. Refer all servicing to qualified service personnel.

 Servicing is required when the player has been damaged in any way, such as the power-supply cord or plug being damaged, liquid has been spilled or objects have fallen into the player, the player has been exposed to rain or moisture, does not operate normally, or has been dropped.

9. Please keep the unit in an environment with good ventilation.
10. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the player.
11. **WARNING:** Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
12. Do not expose the machine to excessive heat such as fire, direct sunshine or similar sources.

WARNING: Keep remote control batteries away from children. Do not ingest. Choking hazard.

CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



WEEE DIRECTIVE & PRODUCT DISPOSAL

 At the end of its serviceable life, this product should not be handled as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX is a trademark of Qualcomm

Technologies International, Ltd., registered in the United States and other countries.

Trademark Notice

DVD Logo is a trademark of DVD Format / Logo Licensing Corporation.

The Blu-ray Disc™, Blu-ray™, Blu-ray 3D™, BD-Live™, BONUSVIEW™ word marks and logos are trademarks of the Blu-ray Disc Association.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Java and all other Java trademarks and logos are registered trademarks of Oracle and/or its affiliates.



Cinavia Notice

This product uses Cinavia™ technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

If playback or copying is interrupted and one of the messages shown below is displayed, the content is an unauthorized copy protected by Cinavia technology.

<u>Message</u>	<u>Cinavia Message Code</u>
[Message(s) 1]	1
[Message(s) 2]	2
[Message(s) 3]	3
[Message(s) 4]	4

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

IPR Message

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All right reserved.



CAUTION: This product utilizes a laser



Do not open cover and do not repair yourself. Refer servicing to qualified personnel

Warranty

The warranty will not be valid under the following conditions:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
 - Incorrect voltage
 - Accidents (including liquid or moisture damage)
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorized service personnel
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Used with accessories not pre-approved

Please refer to and heed all warnings and precautions in the User Manual.

We provide 1-Year warranty from the date of purchase.

If you experience any problem about the product,

please don't hesitate to contact us at:

support@krovatar.com

www.krovatar.com

We will reply to you asap in 24 hours and give you a satisfied solution.

(If there may be short delays due to holidays,

please wait patiently and we will reply to you as soon as possible once we receive your emails.)

KroVatar


使用说明书

型号: KB-200/KB-200D

蓝光光盘™ 播放器

面板说明

- 1. ▲ 打开/关闭
- 2. ►|| 播放/暂停
- 3. ⏻ 电源开/关
- 4. USB 2.0接口
- 5. 遥控接收器
- 6. DC 12V/1A
- 7. HDMI接口
- 8. 同轴接口
- 9. 音频L/R
- 10. LAN
- 11. 视频输出

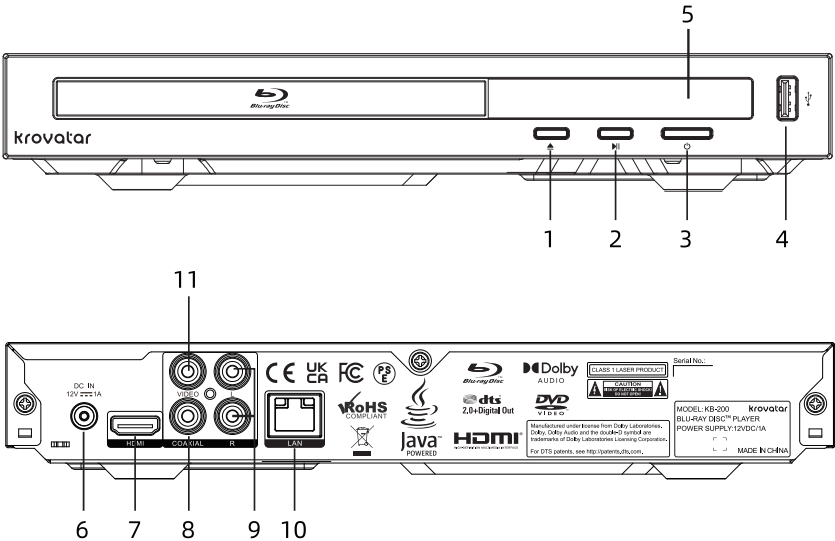

包含物品清单 (请确认以下所有物品均已包含)

- | | |
|---------------------|---------|
| ● KB-200/KB-200D 本体 | ● HDMI线 |
| ● AC 12VDC/1A适配器 | ● AV线 |
| ● 使用说明书 | ● 遥控器 |


型号描述

KB-200: 2K蓝光光盘™播放器

KB-200D: 3D蓝光光盘™播放器

遥控器控制


- (1) 电源：切换待机和开机状态。
- (2) 打开/关闭：打开/关闭光盘托盘。
- (3) 跳转：在播放过程中跳转到用户指定的时间点。
- (4) 重复：重复播放。
- (5) PRGM/红色按钮：编辑程序与播放。
- (6) MARK/绿色按钮：对当前播放的碟片做记忆标记。单按设置书签。长按弹出书签列表。
- (7) A-B/黄色按钮：在播放时第一次按下选择起始点，再按下选择结束点，重复播放选择的区域。
- (8) ZOOM/蓝色按钮：放大或缩小。
- (9) 静音：关闭或开启声音。
- (10) 顶部菜单：打开 BD/DVD 视频光盘的顶部菜单。
- (11) 标题：打开光盘的标题菜单；
弹出菜单：显示或隐藏弹出菜单。
- (12)(13)(14)(15)上、下、左、右：移动菜单中的高亮项；
确认键：确认输入或选择。
- (16) OSC：打开屏幕控制菜单。
- (17) 主页：返回主界面。
- (18) 返回：返回上一显示菜单。
- (19) 音量+：增加音量。
- (20) 音量-：降低音量。
- (21) 信息：显示或隐藏当前播放的光盘信息。
- (22) 播放/暂停
- (23) 停止
- (24) 上一节：跳转到上一个标题、章节或曲目。
- (25) 快速倒带：向后跳转，连续短按可切换至五档速度。(X1->X2->X3->X4->X5 ->PLAY)
- (26) 下一节：跳转到下一个标题、章节或曲目。
- (27) 快速前进：向前跳转，连续短按可切换至5级速度。(X1->X2->X3->X4->X5 ->PLAY)

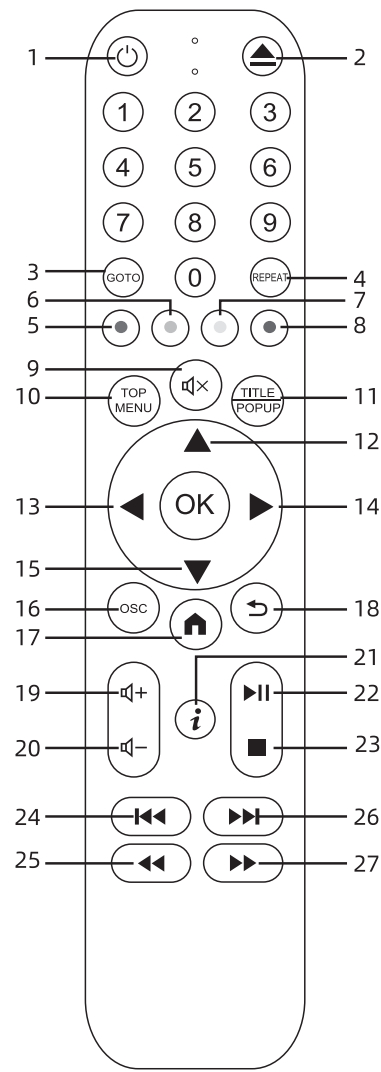

连接方式


1. 连接外部电源

使用随附的AC 12VDC/1A 适配器连接至外部电源。

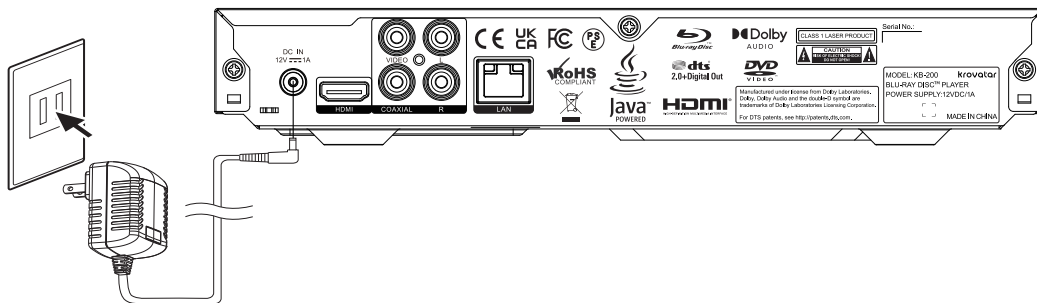

2. 通过HDMI线缆连接电视及其他设备

将HDMI线的一端连接到本产品上的HDMI端口，另一端连接到电视上的HDMI IN端口。

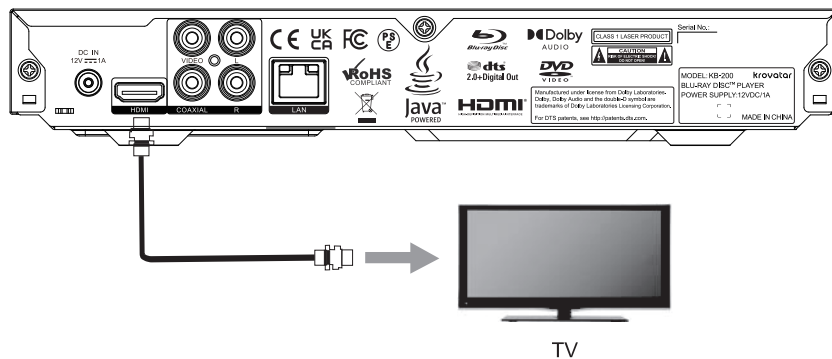

3. USB连接


将USB闪存盘或外部硬盘连接到本产品的USB端口，用于软件更新、BD LIVE内容和媒体播放。

注意：

- 播放光盘时，请勿插入USB设备或硬盘，否则可能导致系统不稳定或播放中断。
- 若要播放来自USB设备或硬盘的内容，请先移除光盘，然后连接USB或硬盘以开始播放。


4. 同轴连接

使用同轴线缆（未包含在内）将本产品上的COAXIAL OUT端口连接到外部音频设备的同轴或数字输入入口。

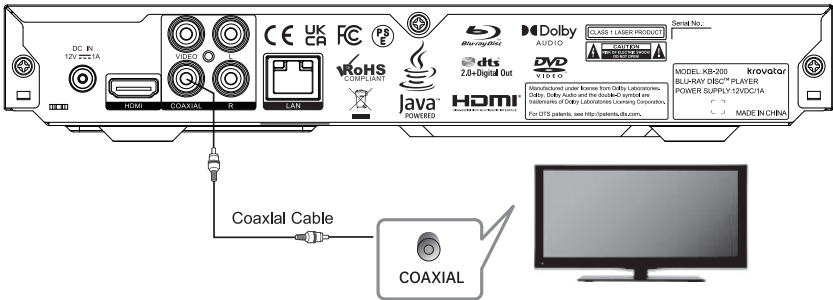


5. RCA连接

如图所示，用附带的AV线缆连接到电视机的RCA输入端。

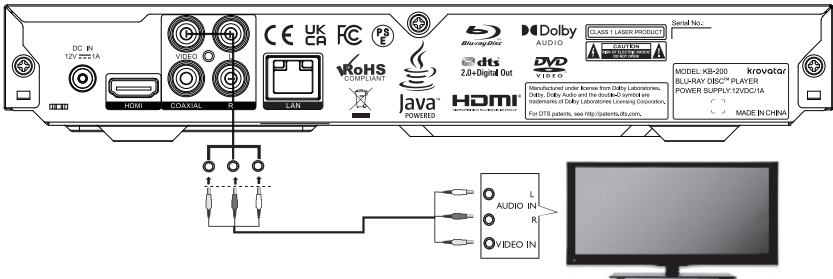

6. 连接到网络

将本产品连接到互联网，即可访问BD-LIVE、DLNA及额外的可下载内容和附加的在线互动程序。

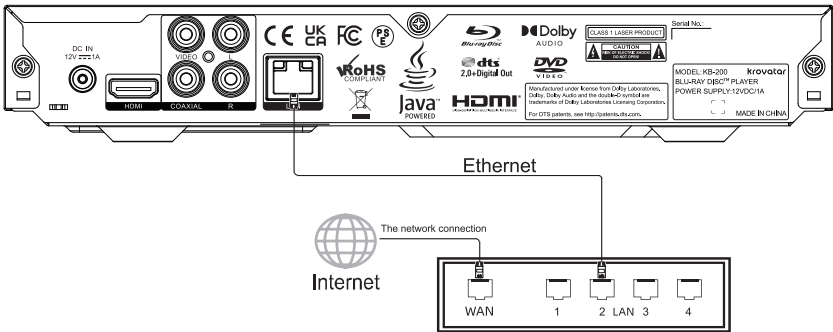

界面操作 (BD模式)



光盘:用于所有光盘播放。

媒体中心:用于 USB 或 HDD 播放。

设置:所有设置菜单。



1. 显示

- 1) 电视屏幕: 选择电视的显示模式。
- 2) 分辨率: 选择电视的分辨率。
- 3) TV 系统: 选择电视系统的类型。
- 4) HDMI 颜色空间: 选择色彩空间。
- 5) HDMI 色深: 选择 HDMI 的颜色模式。
- 6) HDMI 1080P 24Hz: 启用/禁用此设置。
- 7) HDMI 3D: 打开/关闭 (仅适用于KB-200D的菜单)。
- 8) 视频调整: 使用方向键调整输出画面的亮度、对比度、色调和饱和度。




2. 音频

- 1) Spdif: 设置 SPDIF 输出的音频格式。
支持的最大采样率取决于所选的音频格式。
PCM指由蓝光播放器进行处理的音频解码方式。
比特流 (Bitstream) 指由外部设备负责处理的音频解码方式。
- 2) HDMI: 选择 HDMI 模式。
- 3) 降采样频率: 选择下采样方式。
(当放大器连接到的播放设备不支持 96KHz 时选择此项)。
- 4) 输出动态压缩: 设置DRC开/关或自动。




3. 播放

- 1) **CC 关闭字幕**: 开启/关闭 CC 功能。
- 2) **角度标记**: 开启/关闭角度标记功能。
- 3) **画中画标记**: 开启/关闭 PIP 标记功能。
- 4) **第二音频标记**: 开启/关闭第二音频标记。
- 5) **记忆播放**: 开启/关闭记忆播放。
- 6) **PBC**: 开启/关闭 PBC 功能。
- 7) **Audio Watermark Level3**: 开启/关闭。

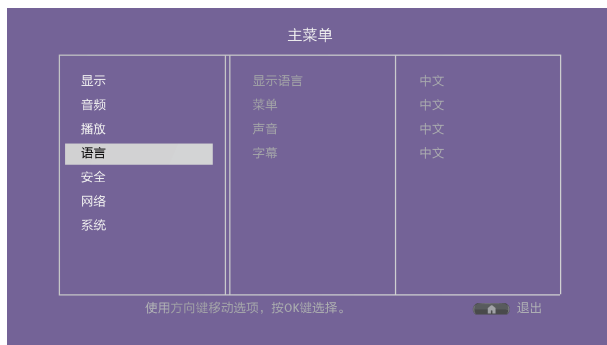

4. 语言

- 1) **显示语言**: 选择 OSD 语言。
- 2) **菜单**: 选择光盘的菜单语言。
- 3) **声音**: 选择程序的音频语言。
- 4) **字幕**: 选择程序的字幕语言。

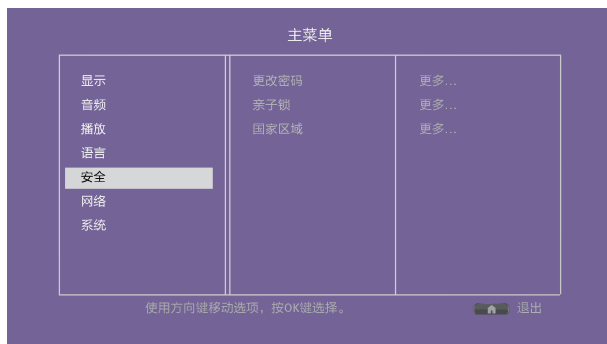

5. 安全

- 1) **更改密码**: 更改家长控制菜单的密码(默认密码为 0000)。
- 2) **家长控制**: 设置家长控制。
- 3) **国家代码**: 设置国家代码。



6. 网络:

- 1) **互联网**: 选择是否启用互联网。
- 2) **信息**: 显示网络信息详情。
- 3) **连接测试**: 测试播放器是否连接到互联网, 并显示测试结果。
- 4) **IP设置**: 配置IP地址设置 (DHCP/静态IP)。
- 5) **BD-Live连接**: 选择需要访问的BD-Live内容。
- 6) **DLNA**: 启用/禁用。
- 7) **Proxy设置**: 启用/禁用。



7. 系统

- 1) **屏幕保护程序**: 开启或关闭屏幕保护程序。
如果设备开机无操作, 将在 3 分钟内屏幕保护程序将显示。
- 2) **光盘自动播放**: 开启/关闭光盘自动播放功能。
- 3) **CEC**: 设置HDMI CEC(消费电子控制)模式。
- 4) **系统信息**: 显示固件版本信息。
- 5) **加载默认设置**: 将播放器恢复到默认设置。
- 6) **升级**: 通过光盘、USB 存储设备更新系统。
- 7) **简易设置**: 返回简易设置菜单。
- 8) **BUDA**: 定义 BD-J 的内存。
- 9) **版权**

故障排除

警告：在申请售后服务前，请先检查此可能的解决方案。
有触电危险。切勿自行拆卸产品外壳。为保持保修有效，切勿自行维修产品。

遥控器无反应	1. 确保播放器已连接到电源插座。 2. 正确安装电池。 3. 请将播放器对准红外接收窗口，角度偏差不应超过30度，距离不得超过5米。 4. 如果遥控器仍无法工作，请尝试将新电池装入遥控器。
无画面	参阅电视手册以选择正确的视频输入。更改视频设置，直到看到屏幕。
HDMI连接无图像	1. 如果此播放器通过HDMI线连接到未经授权的显示设备，音频/视频信号可能无法显示。 2. 检查HDMI线缆是否故障。如果出现故障或损坏，请更换HDMI线缆。
高清视频信号 不在电视上播放	1. 确保音频线连接到电视的音频输入端口。 2. 将电视的音频输入分配到相应的视频输入端口，详情请参阅电视用户手册。
HDMI连接时，没有声音	如果连接设备不支持HDCP或仅支持DVI，您可能无法从HDMI输出听到任何声音。
光盘无法播放	1. 确保光盘正确加载。 2. 确保此播放器支持该光盘，请参阅规格说明。 3. 确保此播放器支持DVD或BD的区域代码。 4. 对于DVD+RW，请确保光盘已写入完成。 5. 清洁光盘。
数据文件无法播放或读取	1. 确保数据文件以标准的UDF、ISO9660或JOLIET格式记录。 2. 确保 JPEG文件扩展名为: jpg、JPG、jpeg或JPEG。
电视上显示“禁止输入”标志	无法执行请求的操作。

如需提出保修申请，请发送邮件至 support@krovatar.com.

规格参数

型号	KB-200/KB-200D
芯片组	MTK + Panasonic Loader
接口/端口	HDMI, USB, LAN, COAXIAL, AUDIO L/R, VIDEO
支持的光盘格式	BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
支持的视频格式	H.264, MPEG-1, MPEG-2, MPEG-4, WMV, AVCHD
支持的音频格式	杜比数字, 杜比数字+, 杜比TrueHD, DTS, WMA
支持的图像格式	JPEG, PNG, GIF
功耗	约13W
工作温度	5°C~35°C
电源供应	DC 12V/1A
尺寸	260*199*44.5mm
重量	约0.854公斤
包含的配件	AC适配器, HDMI线, AV线, 说明书, 遥控器

安全指示

在使用您的新多媒体播放器时,请务必谨遵以下一些基本的安全注意事项。

请仔细阅读所有说明!对于因不当使用该设备而造成的损坏或伤害,我方概不负责。



此符号表示产品内部存在“危险电压”,可能导致触电或人身伤害。



此符号表示随产品附带的重要说明。

警告:为降低火灾或触电风险,切勿使本产品暴露于雨水或潮湿环境中。

该设备不得接触滴水或溅水的情况,且不应将盛有液体的物品(如花瓶)置于其上。

在使用本蓝光播放器前,请阅读全部说明书,并将本手册存放在安全的地方以备将来参考。

1. 阅读并保存这些说明。

2. 注意所有警告并遵守所有指示。

3. 请勿在水边使用此播放器。

4. 只能用干布清洁。

5. 不要堵塞任何通风口,并按照制造商的说明安装。

6. 不要安装在任何热源附近,如散热器、热存储器或产生热量的播放器(包括扩音器)等热源旁边。

7. 在雷雨大风或者长时间未使用本播放器的情况下,请拔掉插头。

8. 将所有维修交给有维修资质的人员。



播放器以任何方式损坏时,如电源线或插头损坏、液体溢出、物体落入播放器、播放器进水或受潮时,都需要进行维修。

9. 请将本机置于通风良好的环境中。

10. **警告:**减少火灾或触电的危险,请勿将本产品暴露在下雨或潮湿环境中,本产品不得暴露在滴水或飞溅的环境中,不得将盛满液体的物品,如花瓶放在本产品上。

11. **警告:**如果使用电源插头或者耦合器作为断开装置,断开装置应保持随时可操作。

12. 不要将机器暴露在过热的地方,例如火、阳光或类似地方。

警告:请将遥控器的电池远离儿童。切勿吞食,有窒息危险。

注意:为减少触电危险,请勿拆卸背面。内部缺少的器件需由有资质的维修人员提供。



保修条款

如果以下情况发生，保修将无效：

1. 产品未按照制造商的操作说明进行安装、操作或维护。
2. 产品被用于非预期功能以外的用途。
3. 产品被用于非家用目的。
4. 产品损坏或故障由以下任一情况引起：
 - 电压不正确
 - 意外事故(包括液体或湿气损坏)产品被滥用或误用
 - 故障或不当安装
 - 安装错误或不正确
 - 电源供应问题，包括电压尖峰或雷击损坏
 - 虫害
 - 非授权服务人员对产品进行篡改或修改
 - 暴露于异常腐蚀性物质
 - 向设备内插入异物
 - 使用未经预批准的配件

请参阅并遵守用户手册中的所有警告和注意事项。

我们提供自购买之日起 1 年 保修。

**如果您遇到任何产品问题，
请随时通过以下方式联系我们：**

support@krovatar.com

www.krovatar.com

我们将在 24 小时内尽快回复您，并为您提供满意的解决方案。

(如遇节假日可能会有短暂延迟，
请耐心等待，我们看到您的邮件后将尽快回复您。)

Krovatar


取扱説明書

型番：KB-200/KB-200D


ブルーレイディスクプレーヤー

各部の機能

- ① ディスクトレイ開閉ボタン
ディスクトレイを開閉します。
- ② 再生／一時停止ボタン
ディスク再生を開始／一時停止します。
- ③ 電源ボタン
本体の電源を入／切します。
- ④ USB入力端子
USBメモリー・外付けHDD内の動画・写真・音楽を再生できます。
- ⑤ リモコン受信部
リモコンからの信号を受信します。

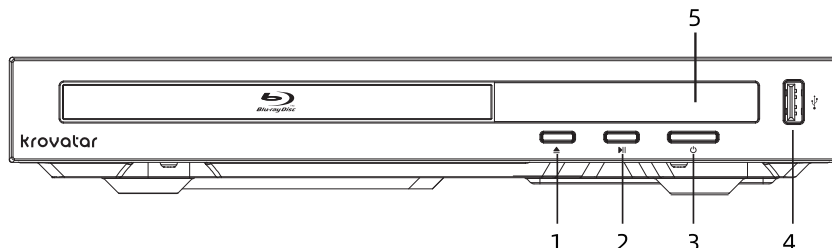

- ⑥ 電源入力端子
付属のACアダプターで電源供給します。
- ⑦ HDMI出力端子
HDMIケーブルを繋いで、外部機器に映像と音声を出します。
- ⑧ 同軸デジタル出力端子
同軸ケーブル（別売）を繋いで、オーディオ機器に音声を出します。
- ⑨ オーディオL/R
アナログオーディオ出力端子。
- ⑩ LAN入力端子
LANケーブル（別売）を接続できます。（BD-Live、DLNA用）
- ⑪ ビデオ出力
コンポジットビデオ出力端子。

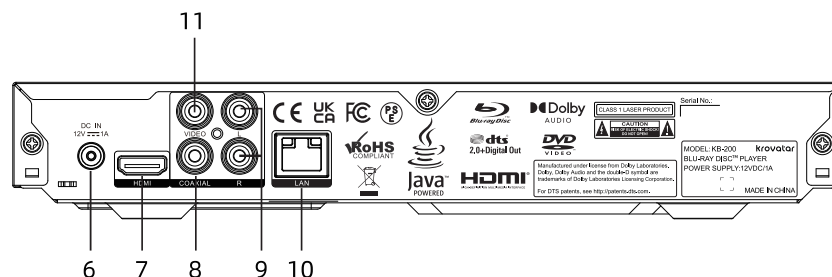

付属品（※開封時にすべて揃っていることをご確認ください）

- KB-200/KB-200D本体
- ACアダプター
- 取扱説明書
- HDMIケーブル
- ACケーブル
- リモコン

モデルの説明


KB-200: 2Kブルーレイディスクプレーヤー

KB-200D: 3Dブルーレイディスクプレーヤー

リモコン操作

- ① **電源**: プレーヤーの電源を入／切します。
- ② **ディスクトレイ開閉**: ディスクトレイを開閉します。
- ③ **GOTO**: 指定した時間またはチャプターへ直接移動します。
- ④ **REPEAT**: リピート再生のモードを切り替えます(ディスクの種類により異なります)。
- ⑤ **赤ボタン(プログラム)**: プログラムを編集して再生します。
- ⑥ **緑ボタン(ブックマーク)**: 再生中のディスクにメモリマークを設定します。
短押しでブックマークを作成、長押しでブックマーク一覧を呼び出します。
- ⑦ **黄ボタン(ブックマーク)**: 再生中に1回押すと開始点を設定、
再度押すと終了点を設定し、指定区間を繰り返し再生します。
- ⑧ **青ボタン(ズーム)**: 画面を拡大・縮小します。
- ⑨ **消音**: 音声を一時的に消します。
- ⑩ **TOP MENU**: BD/DVDのトップメニューを開きます。
- ⑪ **TITLE/POPUP**: タイトルメニューまたはポップアップメニューを表示します。
- ⑫～⑮ **方向キー**: メニュー項目を上下左右に移動します。
OK(決定): 選択を確定します。
- ⑯ **OSC**: 画面メニューを表示します。
- ⑰ **ホーム**: メインメニューに戻ります。
- ⑱ **戻る**: 1つ前の画面へ戻ります。
- ⑲ **音量+**: 音量を上げます。
- ⑳ **音量-**: 音量を下げます。
- ㉑ **情報**: 再生中のトラック情報などを表示します。
- ㉒ **再生/一時停止**: 再生または一時停止を行います。
- ㉓ **停止**: 再生を停止します。
- ㉔ **前へ**: 前のチャプター/トラックへ移動します。
- ㉕ **巻き戻し**: 短く続けて押すと速度が(×1→×2→×3→×4→×5)と切り替わります。
- ㉖ **次へ**: 次のチャプター/トラックへ移動します。
- ㉗ **早送り**: 短く続けて押すと速度が(×1→×2→×3→×4→×5)と切り替わります。


※ 色ボタンの機能はディスクによって異なる場合があります。

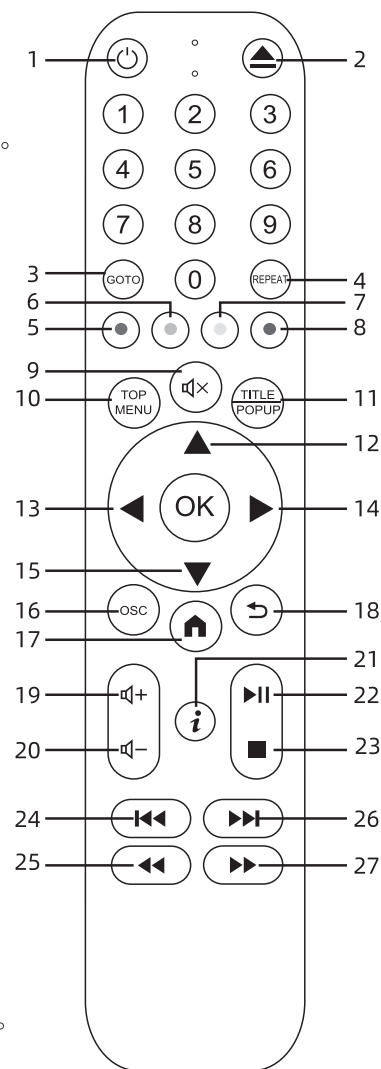

接続


1. 電源接続

付属のAC 12VDC/1Aアダプターを使用して外部電源に接続してください。

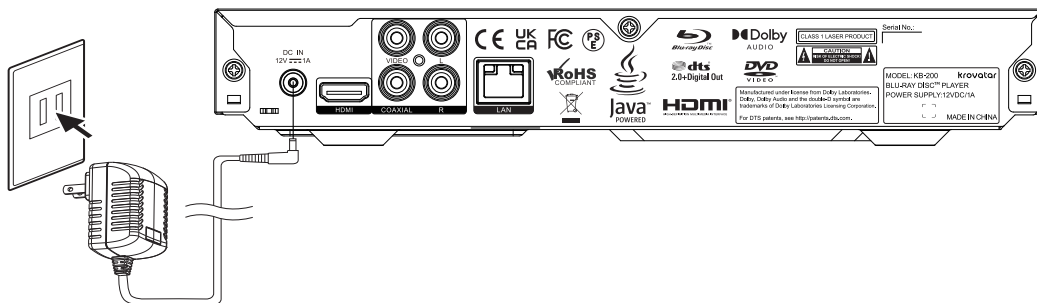

2. HDMI 接続

HDMIケーブルの一方の端を本製品のHDMI1出力端子に接続し、もう一方の端をテレビのHDMI入力端子に接続してください。

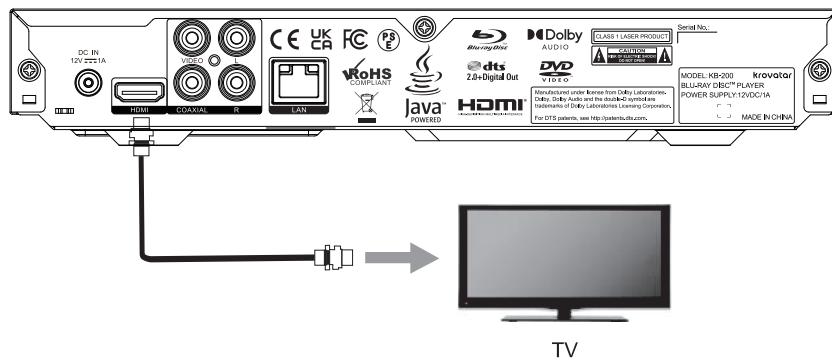

3. USB接続

USBメモリーまたは外付けHDDを本製品のUSB入力端子に接続すると、BD-Liveコンテンツ、メディア再生ができます。


※再生中は、USBメモリーや外付けHDDを挿入しないでください。

システム不安定や再生停止の原因となる可能性があります。

※USBメモリーや外付けHDDのコンテンツを再生するには、まずディスクを取り出し、その後USBメモリーまたは外付けHDDを接続して再生を開始してください。


4. 同軸デジタル接続

同軸ケーブル（別売）を本製品の同軸デジタル出力端子から、外部オーディオ機器の同軸デジタル入力端子に接続してください。

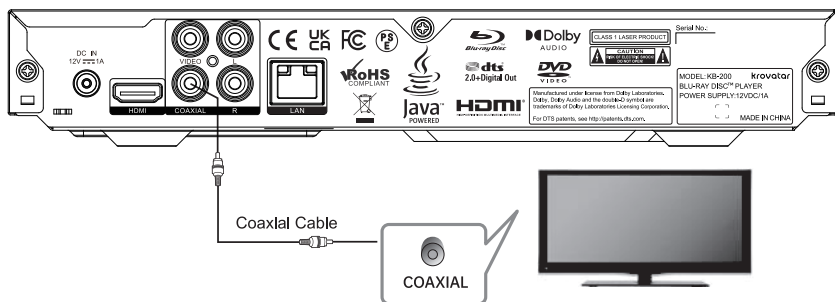


5. RCA 接続

図のように、付属のAVケーブルでテレビのRCA入力端子に接続してください。

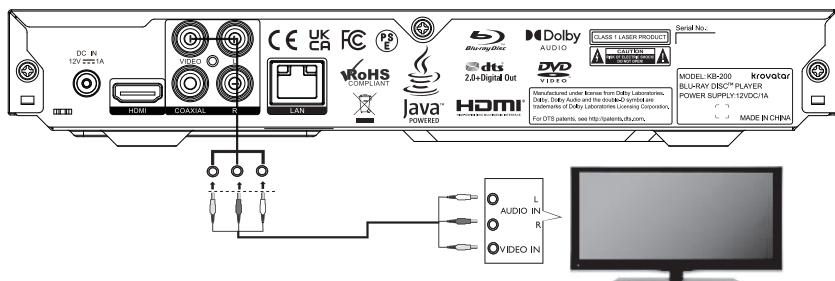

6. ネットワーク接続

LANケーブル（別売）を使用して本製品をインターネットに接続すると、BD-Live、DLNAにアクセスでき、オンライン特典コンテンツを受け取れます。

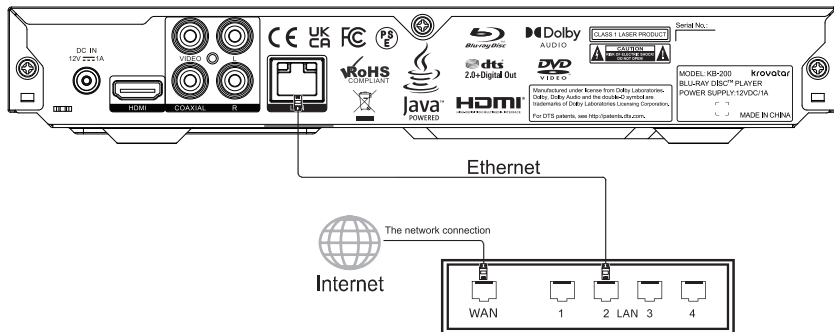

インターフェース操作(メインメニュー)



メインメニューでは、ディスク再生・USB再生・設定などの操作がおこなえます。

● ディスク

挿入したディスクを再生します。

● メディアセンター

USBメモリーや外付けHDD内の写真・動画・音楽を再生できます。

● 設定

映像・音声・言語設定など、各種設定メニューを開きます。




1. 映像

- 1) TVスクリーン: 画面のアスペクト比(画面比率)を設定します。
- 2) 解像度: 画面の解像度を設定します。
- 3) TVシステム: テレビ方式を設定します。(日本国内は通常NTSCを選択)
- 4) HDMI Color Space: HDMIの色空間を設定します。
- 5) HDMI Deep Color: 設定のオン/オフを変更します。
- 6) HDMI 1080P 24Hz: 設定のオン/オフを変更します。
- 7) HDMI 3D: 3D機能をオン/オフにします。(KB-200D 専用メニュー)
- 8) 映像調整: 方向キーで出力画面の明るさ、コントラスト、色相、彩度を調整します。




2. オーディオ

- 1) SPDIF:
SPDIFによるオーディオ出力フォーマットを設定します。
サンプリングレートの上限は、オーディオデータをより低い周波数でサンプリングするかどうかで異なります。
- 2) HDMI: HDMI接続時の音声出力方式を設定します。
- 3) ダウンサンプリング: 音声を下位互換の周波数に変換するかどうかを設定します。
- 4) DRC (ダイナミックレンジコントロール):
爆音と小さな音の差を調整して聴きやすくする機能です。
 - オフ: 圧縮を行わず、よりダイナミックな音質で再生します。
 - オン: 音量差を抑えた、標準的な圧縮レベルで再生します。
 - オート: ディスクに指定されたダイナミックレンジで再生します。(※BDのみ対応)

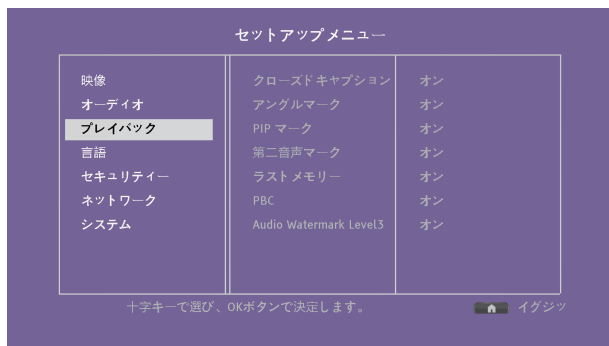


3. プレイバック

- 1) クローズドキャプション: 字幕(クローズドキャプション)のオン/オフを設定します。
- 2) アングルマーク: 複数アングルを収録したディスク再生時、アングル切り替え可能であることを示すマークのオン/オフを設定します。
- 3) PIPマーク: PIP(ピクチャー・イン・ピクチャー)機能が利用できるディスクで、PIP切り替え可能であることを示すマークのオン/オフを設定します。
- 4) 第二音声マーク: セカンドオーディオが収録されている場合、切り替え可能であることを示すマークのオン/オフを設定します。
(※PIP適用ディスクで使用可能)
- 5) ラストメモリー: 前回停止位置を記憶し、次回再生時に続きから再生できる機能のオン/オフを設定します。
- 6) PBC: VCD2.0のメニュー操作に対応する機能のオン/オフを設定します。
- 7) Audio Watermark Level3

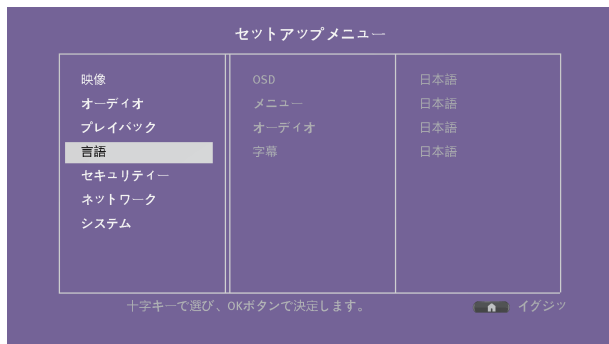

4. 言語

- 1) OSD: プレーヤーの表示言語を設定します。
- 2) メニュー: ディスク再生時に表示されるディスクメニューの言語を設定します。
(※ディスクによって設定可能な言語は異なります)
- 3) オーディオ: ディスクの音声言語を設定します。
(※ディスクによって対応言語は異なります)
- 4) 字幕: ディスクの字幕言語を設定します。
(※ディスクによって対応言語は異なります)

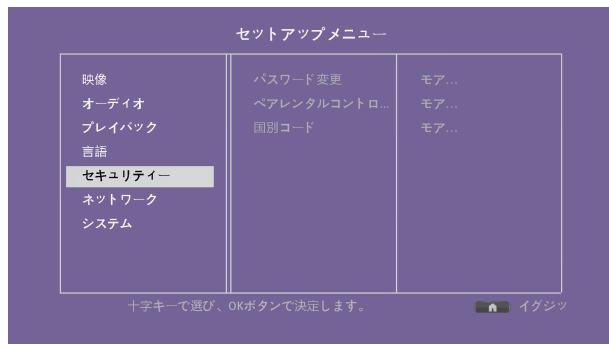

5. セキュリティー

- 1) パスワード変更: パスワードを設定することで、特定の映像コンテンツの視聴を制限できます。(初期パスワードは「0000」です)
- 2) ペアレンタルコントロール: 年齢制限に基づき、再生可能な映像内容を制限します。
一部シーンがブロックされる場合や、代替バージョンに自動で切り替わる場合があります。
- 3) 国別コード: 視聴制限に使用する国コード (Region Code) を設定します。



6. ネットワーク

- 1) **インターネット接続**: インターネットを有効にするかどうかを選択します。
- 2) **情報**: ネットワーク情報の詳細を表示します。
- 3) **接続テスト**:
本製品がインターネットに接続されているかをテストし、結果を表示します。
- 4) **IP設定**: IPアドレス設定を構成します (DHCP / 静的IP)。
- 5) **BD-LIVEコネクション**: アクセスするBD-Liveコンテンツを選択します。
- 6) **DLNA**: DLNAの有効／無効を選択します。
- 7) **プロキシ設定**: プロキシの有効／無効を設定します。



7. システム

- 1) **スクリーンセーバー**: スクリーンセーバー機能のオン／オフを設定します。
- 2) **自動再生**: ディスク挿入時の自動再生機能のオン／オフを設定します。
- 3) **CEC**: ペアリング済み機器の一覧を開き、接続する機器を選択します。
- 4) **システムインフォメーション**:
機器の型番、ソフトウェアバージョン、その他情報を表示します。
- 5) **設定初期化**:
各種設定を初期状態に戻します。
機器の動作に問題がある場合や、設定をリセットしたい場合に使用してください。
※通常の操作で使用する際は、個人設定が初期化されるためご注意ください。
- 6) **アップグレード**:
ディスクまたはUSBストレージを使用して、システムソフトウェアを更新します。
- 7) **簡単設定**: 簡単設定メニューを表示します。
- 8) **BUDA**: BD-J用のメモリを定義します。
- 9) **Copy Right**

トラブルシューティング

⚠警告

分解・修理を無断で行うことは禁止されています。

無断修理は保証対象外となります。また、感電防止のため、本体カバーの取り外しは絶対に行わないでください。

問題	原因	解決
ディスクを再生できない	ディスクが正しくセットされていない	以下を確認してください： ・ディスクのラベル面が上になっているか ・ディスクが中央に正しくセットされているか
	ディスクの表面が汚れている	ディスク表面を柔らかい布で中心から外側へ向けて拭いてください
	ローダーが汚れている	レンズが汚れている場合は、市販のレンズクリーナーを使用してください
	DVD・BDのリージョンコードが対応していない	対応リージョンのディスクを使用してください
リモコンが動作しない	本体の電源が入っていない	本体が電源コンセントに接続されているか確認してください
	電池が正しく取り付けられていない	電池の向き(＋／－)が正しいか確認してください
	リモコン信号の受光部に遮蔽物がある	受光部の前に障害物がないか確認してください
	電池が切れている	新しい電池と交換してください
	リモコンと本体の距離が離れすぎている	リモコンは本体正面の受光部に向け、5m以内で使用してください
HDMI接続で画像が出ない	非対応の機器、または不適切なHDMIケーブルで接続している	HDMI機器、HDCP対応機器を使用しているか確認してください
	HDMIケーブルに不具合がある	他のHDMIケーブルに交換して試してください

問題	原因	解決
USBで再生できない	USBのフォーマットがFAT32 / NTFSではない	USBメモリーをFAT32 / NTFS形式で再フォーマットしてください
	ファイル形式が本製品でサポートされていない	ファイルを変換するか、対応形式(JPEG、MP4など)に変更してください。
	USBデバイスが正しく挿入されていない	USB端子に奥までしっかり挿入されているか確認してください
HDMI接続で音声が出ない	接続機器がHDCPに対応していない	接続する機器をHDCP対応機器に変更してください
	DVI⇒HDMI変換接続など互換性が低い環境で接続している	変換アダプターを使用している場合、別の接続方法をお試しください
データファイルが読み込めない	ファイル形式が非対応	JPEG(jpg、jpeg)など、対応フォーマットで保存されているか確認してください
	ファイルが破損している可能性	別のファイルで読み込みを試し、問題が再現する場合はファイル破損の可能性があります
電源が入らない	本体が故障している可能性	弊社サポートセンターまで修理をご依頼ください

製品仕様

品名	ブルーレイディスクプレーヤー
インターフェース	HDMI出力端子×1、USB Type-A入力×1 (USB2.0対応 最大1TBまで)、LAN端子×1、同軸デジタル出力端子×1、オーディオL/R端子×1、ビデオ出力端子×1、電源入力端子×1
対応ディスクフォーマット	BD、BD-R、BD-RE、DVD-R/RW、DVD+R/RW、DVD-Video、VCD、CD、CD-R/RW
対応ビデオフォーマット	H.264、MPEG-1、MPEG-2、MPEG-4、WMV、AVCHD
対応オーディオフォーマット	Dolby Digital、Dolby Digital Plus、Dolby TrueHD、DTS、WMA
対応ビデオファイル形式	MOV、AVI、MP4、FLV、MKV、TRP、TS、MPG、MPEG
対応オーディオファイル形式	MP3、WMA、AC3、DTS
対応画像ファイル形式	JPEG、PNG、GIF
消費電力	約13W
許容動作温度	5℃～35℃
電源	DC 12V/1A
本体サイズ	幅260mm×高さ44.5mm×奥行199mm
製品重量	約854g
付属品	ACアダプター、HDMIケーブル、AVケーブル、リモコン 取扱説明書兼保証書

使用方法とメンテナンス

動作環境温度：5～35℃ の範囲でご使用ください。

使用中にプレーヤー本体が温かくなることがありますが、異常ではありません。

長期間使用しない場合は、電源アダプターをコンセントから抜いて保管してください。

落下・衝撃・水濡れを避け、直射日光・高温多湿の場所での使用および保管は行わないでください。

プレーヤーは必ず乾燥した風通しの良い場所で保管してください。また、排熱を妨げるため布や物で覆わないでください。

清掃の際は、必ず電源を切断してから行ってください。液晶画面は柔らかい乾いた布で優しく拭いてください。

化学薬品・洗剤・アルコール類は使用しないでください。筐体を傷つける原因となります。

安全に関する指示



危険: この記号は、誤った取扱いをすると 感電による重大な傷害の危険がある ことを示します。




警告: この記号は、誤った取扱いをすると 火災・感電などの重大事故につながる危険がある ことを示します。

注意: この記号は、誤った取扱いをすると 物的損害や軽度のケガにつながる可能性がある ことを示します。

■ ブルーレイプレーヤーを使用する前に以下の安全上の注意を必ずお読みいただき、保管してください。

1. 取扱説明書をよく読み、正しくご使用ください。
2. すべての警告および注意表示に従ってください。
3. 水まわりや湿気の多い場所では使用しないでください。
4. お手入れは 乾いた柔らかい布 で行ってください。
5. 分解や改造は行わないでください。故障の原因になります。
6. 換気口をふさがないでください。熱がこもる原因となります。
また、放熱部（通風孔・アダプターなど）の近くに物を置かないでください。
7. 電源コードが踏まれたり、物で押しつぶされないよう注意してください。
特にプラグ付近や本体に入る部分は損傷しやすいため注意が必要です。
8. メーカー指定の台座・スタンド・三脚・テーブルでのみ使用してください。
9. 異常を感じたとき、長期間使用しないときは、電源プラグを抜いてください。



■ 修理が必要となる場合

以下の症状が見られるときは、必ず 有資格者によるサービス窓口へ修理をご依頼ください。

電源コードやプラグが破損している

液体がこぼれ、本体内部に入った可能性がある

本体が雨に濡れた

正常に動作しない、または性能が著しく低下している

本体を落とした、または筐体が破損した

※ ユーザーが分解・修理できる部品はありません。内部には触れないでください。

注意: リモコンの単四乾電池は
子供の手の届かないところに保管してください。
誤って飲み込まないようにしてください。
窒息の危険があります。

■ 使用上の注意

1. 本体は直射日光の当たる場所や高温環境では使用しないでください。
2. 火災・感電防止のため、湿気の多い場所（水まわり・浴室付近）では使用しないでください。
3. 電源プラグを抜く前に、電源が切れていることを確認してください。
4. 電源プラグが破損した状態で使用しないでください。
5. 本体は必ず指定の種類を使用し、直射日光や高温になる場所に放置しないでください。

■ 注意

感電や火災の危険を避けるため、カバー（筐体）の取り外しは絶対に行わないでください。

内部にユーザーが修理できる部品はありません。

修理は必ず 有資格サービス担当者 にご依頼ください。

■ クラス1レーザー製品

本機にはレーザーを使用しています。

指定以外の操作・調整を行うと、有害なレーザー放射を受ける可能性があります。

分解・改造は絶対に行わないでください

WEEE DIRECTIVE & PRODUCT DISPOSAL

 At the end of its serviceable life, this product should not be handed as household or general waste. It should be handed over to the applicable collection point for the recycling of electrical and electronic equipment, or returned to the supplier for disposal.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries.

Trademark Notice

DVD Logo is a trademark of DVD Format / Logo Licensing Corporation.
The Blu-ray Disc™, Blu-ray™, Blu-ray 3D™, BD-Live™, BONUSVIEW™ word marks and logos are trademarks of the Blu-ray Disc Association.
Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
Java and all other Java trademarks and logos are registered trademarks of Oracle and/or its affiliates.



Cinavia Notice

This product uses Cinavia™ technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.
If playback or copying is interrupted and one of the messages shown below is displayed, the content is an unauthorized copy protected by Cinavia technology.

<u>Message</u>	<u>Cinavia Message Code</u>
[Message(s) 1]	1
[Message(s) 2]	2
[Message(s) 3]	3
[Message(s) 4]	4

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

アフターサービス

■この製品は家庭用です。

この製品は家庭用です。業務用や長時間連続して使用しないでください。

■万一、本体を落としたり破損した場合は点検修理(有料)をご依頼ください。

お買い上げの販売店又は弊社カスタマーセンターへご相談ください。

■取扱説明書「安全上のご注意」の記載事項を守ってお使いください。

思わぬ事故や機器の故障の原因となります。

■保証書

この製品は保証書付きです。保証書はお買い上げの販売店で「販売店名・お買い上げ日」等の記入をご確認の上、内容をよくお読みいただいた後、大切に保管してください。

保証期間は、お買い上げ日より1年間です。

■修理をご依頼いただく際は

【保証期間中の場合】

商品に保証書を添えてお買い上げの販売店又は弊社カスタマーセンターへご相談ください。

【保証期間中が過ぎている場合】

お買い上げの販売店又は弊社カスタマーセンターへご相談ください。

※保証期間内外に関わらず、いかなる理由におきましても、お客様が業者に依頼して発生した本製品の取り付け・取り外しの費用等は弊社では一切責任を負いかねます。

※本製品の故障による代替品の貸出は一切行っておりません。

※弊社は出張修理サービス等を行っていません。

※修理をご依頼いただく際の輸送箱は、お客様自身でご用意をお願いします。

「修理規定」に基づき修理を承っております。

「修理規定」の最新版は弊社ホームページでご確認いただけます。

高橋国際商事ホームページ <https://www.takaworld.co.jp>

■アフターサービスについてご不明な場合は

アフターサービスについてご不明な場合は、お買い上げの販売店又は弊社カスタマーセンターへご相談ください。

免責事項について

- 地震や雷などの自然災害及び当社の責任以外の火災、第三者による行為、その他の事故、お客様の故意または過失、誤用、その他異常な条件下での使用によって生じた損害に関して、当社は一切責任を負いません。
- 本製品の使用または使用不能から生ずる付随的な損害（事業利益の損失・事業の中断など）に関して、当社は一切責任を負いません。
- 取扱説明書の記載内容を守らないことによって生じた損害に関して、当社は一切責任を負いません。
- 当社が関与しない接続機器、ソフトウェアとの組み合わせによる誤動作などから生じた損害に関して、当社は一切責任を負いません。
- 衝撃・振動・誤動作および故障や修理などによって生じた記録データの損壊、損失について、当社は一切責任を負いません。

保証規定

- ・保証期間内の製品については、保証規定とあわせて「修理規定」も必ずお読みください。
同意いただいたうえで、アフターサービスをご依頼ください。
- ・本規定は予告なく変更する場合がございます。本規定の最新版は、当社ホームページでご確認
いただけます。なお、本規定は常に最新版を適用するものとします。
- ・延長保証など、当社保証とは別の保証を利用される場合は、修理品送付前に販売店にお問い合わせ
ください。
- ・保証書は再発行いたしませんので紛失しないように大切に保管してください。
- ・保証期間は使用開始時期・使用期間にかかわらず、保証書に記載の期間です。修理後も保証期
間に変更はありません。
- ・修理の都合により、製品を交換、あるいは製造番号を変更する場合がございます。
生産終了や修理部材欠品等の理由により、当初お約束していた代替品の提供や修理が満足にで
きない場合があることにつきご了承ください。
- ・保証期間内であっても、保証内修理適用判断については、当社権限にて実施させていただきます。
全て無料保証修理をお約束するものではありません。

①ご購入日から保証期間内に正常なご使用で故障が発生した場合、製品と保証書をご持参のうえ、
お買い上げ販売店又は当社カスタマーセンターにお申しつけください。当社無料修理保証規定
に基づき無償で本体を修理いたします。

②本製品をネットオークション、ネットフリーマーケット、転売品、中古品またはそれに類する
条件で入手した場合は製品保証の対象外となります。

③本製品を他者から譲り受けた場合、製品保証の対象者は購入者本人となります。当保証規定に
基づく修理の依頼は購入者本人（購入したことを証明し得る者）が行う必要があります。

④保証期間でも次のような場合には有料修理となります。

※使用上の誤り、または改造や不当な修理による故障または損傷。

当社によらない分解、改造（ソフトウェアを含む）、修理等が行われた痕跡がある場合。

※お買い上げ後の取付場所の移動、落下、引越し、輸送、強い衝撃等による故障または損傷。

※火災、塩害、ガス害（硫化ガスなど）、虫害、鼠害、地震、落雷、津波および風水害、その他天
災地変、錆、カビ、たばこの煙等による汚れ、ゴミや埃などの異物混入、あるいは異常電圧など
の外部要因による故障または損傷。

※一般家庭用以外（業務用、または異常な連続使用など）のご使用、船舶への搭載などに使用され
た場合の故障または損傷。

※保証書の提示がない場合。購入日が確定できるレシート、納品書、販売店からの発送メール等が
無い場合。

※保証書にお買い上げ年月日、お客様名、販売店名の記入のない場合、あるいは字句を書き換えら
れた場合。

※付属品（リモコン、アダプター等）と消耗品（バッテリー、フィルター等）の交換。

※液晶パネルのドット抜けは製品の性質上、初期不良・修理・返品制度の対象外となります。

⑤サポート及び保証書は日本国内にのみ有効です。Effective only in Japan.

製品保証書

品 名 ブルーレイディスクプレーヤー		型 番 KB-200 KB-200D
お買い上げ日 年 月 日		保証期間 1年間
お客様 お名前		
ご住所		
販売店 記入欄（記入のない場合は保証の対象となりません） ※ただし購入日を確定できる書類（レシート、納品書、販売店からの発送メール等）がある場合は保証の対象となります。 販売店名・住所・電話番号 印		

※本製品のサポートは日本国内限定となります。

※製品をお送り頂きます場合は必ず弊社カスタマーセンターへご連絡後にお願いします。

発売元：株式会社 高橋国際商事
〒273-0005 千葉県船橋市本町5-12-20
カスタマーセンター
一般電話 047-409-9832
受付時間:平日 9:00～17:00(土日祝祭日および弊社指定休日を除く)

krovatar

